

Online Conductivity Controller Model DDG-2080X



Shanghai BOQU Instrument Co.,LTD

Address:No. 118 Xiuyan Road,Pudong New Area,Shanghai,zip code:201315,China www.boquinstrument.com|email:michael@shboqu.com|mob:86-15000087545

SHANGHAI BOQU INSTRUMENT COMPANY

Content

Safe operation procedures	2
Instrument use	2
Product content	2
Specifications	3
Instrument installation	4
Connection label	7
Electrode connection figure	7
Relay contact protection	10
Display	11
Key	13
Keeping mode	13
Setting	13
Current 1 settings	14
Current 2 settingsCurrent 2 settings	14
Relay 1 settings	14
Relay 2 settings	15
Relay 3 settings	15
Measuring settings	16
Temperature settings	16
RS485 settings	17
Date settings	17
Data log settingsData log settings	17
Output test	18
Language Settings	18
Reset parametersReset parameters	18
Record query	19
EC calibration	19
Default	21
Password	23
Error code	23
RS485 command	23

Safe operation procedures

Read the following instructions before using the instrument.

- 1. After unpacking the instrument please check for damage due to shipping.
- 2. The instrument must be operated by trained professional and technical personnel.
- 3. Read the manual carefully to avoid incorrect wiring connection that can cause equipment damage and safe problem.
- 4. After wiring carefully check all are correct then can power on and make sure the others equipment are correct.
- 5. Please avoid installing in a high humidity, high temperature, corrosive and in a direct sunlight environment.
- 6. Please separate the power lines of instrument from other machines that produces high noise in the power lines.

Instrument use

Instruments are used in industrial measuring of the temperature, conductivity, Resistivity, salinity and total dissolved solids, such as waste water treatment, environmental monitoring, pure water, sea farming, food production process, etc.

The instrument can be panel, wall or pipe mounted.

The instrument provides two current outputs. The maximum load is 500 Ohm.

The instrument provides 3 relays. It can pass though a maximum of 5 Amps at 250 VAC or 5 Amps at 30VDC.

Product content

the product package contains 1 instrument, the printed manual, 4 sets of holder.(fixed block, fixed bar, screw)


Specifications

Functions	EC	Resistivity	Salinity	TDS		
Measuring range	0.00uS-200	0.00-20.00	0.00-78.00	0-133000		
	0mS	ΜΩ-СΜ	g/Kg	ppm		
Resolution	0.01/0.1/1	0.01	0.01	1		
Accuracy	±1%F.S.	±1%F.S.	±1%F.S.	±1%F.S.		
Temp. compensation	Pt 1000/NTC	30K				
Temp. range	-10.0 to +130).0℃				
Temp. compensation range	-10.0 to +130).0℃				
Temp. resolution	0.1°C					
Temp. accuracy	±0.2℃					
Cell constant	0.001 to 20.0	000				
Ambient temperature range	0 to +70℃					
Storage temp.	-20 to +70°C	-20 to +70℃				
Display	Back light, dot matrix					
EC current output1	Isolated, 4 to 20mA output , max. load 500Ω					
Temp. current output 2	Isolated, 4 to 20mA output , max. load 500Ω					
Current output accuracy	±0.05 mA					
RS485	Mod bus RTU protocol					
Baud rate	9600/19200/38400					
Maximum relay contacts capacity	5A/250VAC,5	SA/30VDC				
Cleaning setting	ON: 1 to 100	0 seconds, OI	FF: 0.1 to 100	0.0 hours		
One multi function relay	clean/period	alarm/error	alarm			
Relay delay	0-120 second	ds				
Data logging capacity	500,000					
Language selection	English/traditional Chinese/simplified Chinese					
Waterproof grade	IP65					
Power supply	From 90 to 260 VAC, power consumption < 5 watts					
Installation	panel/wall/pipe installation					
Weight	0.85Kg					
	1					


Instrument installation

The instrument can be panel, wall or pipe mounted installation.


Panel Installation: Make a 138x138 mm square cutout and insert the instrument. Screw in the fixed block with the screws and fixed bar.

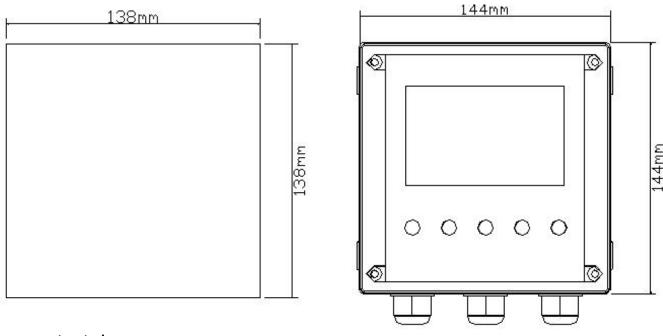


cutout size

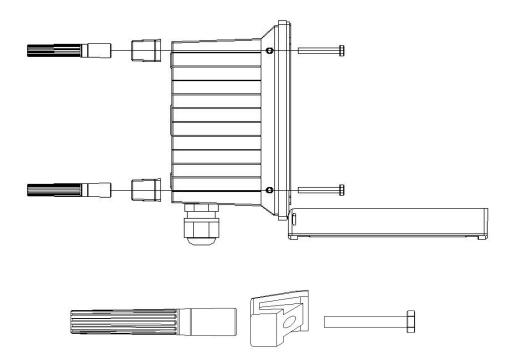

installation figure

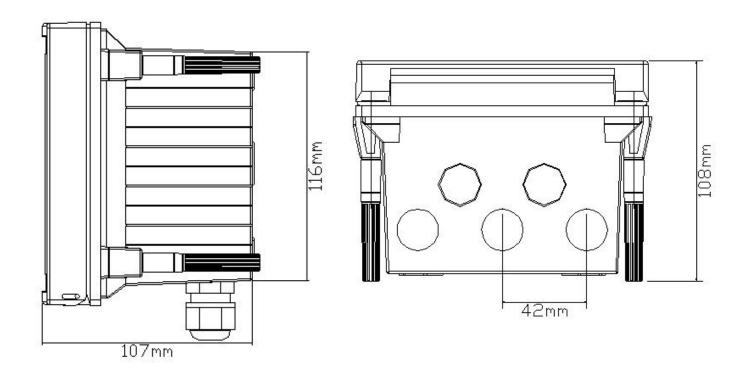


dimension

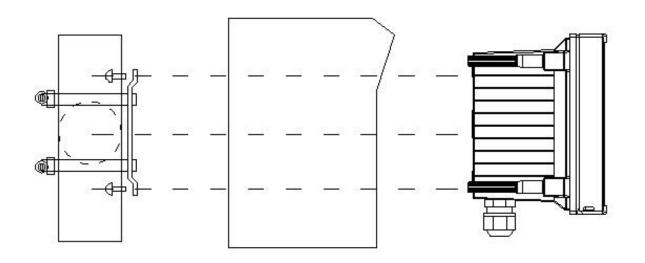



wall and pipe installation

Connection label

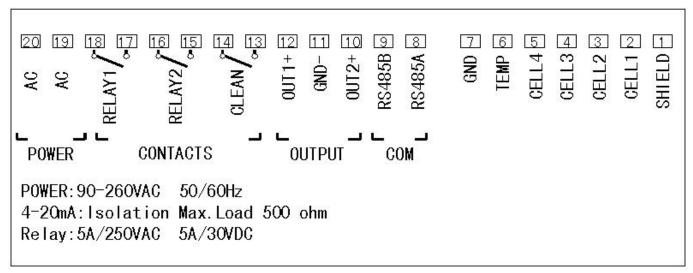



Electrode connection figure

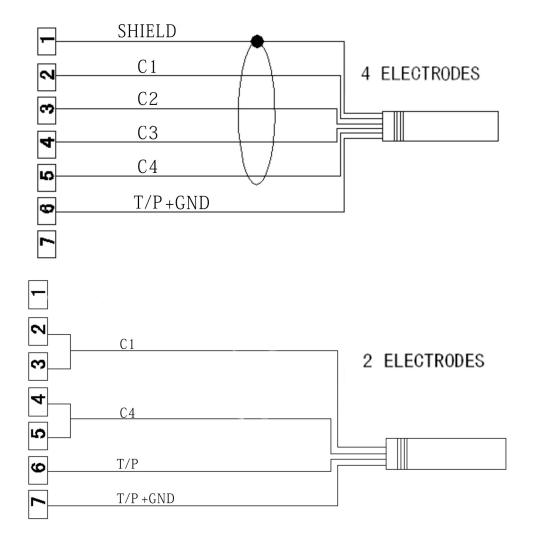


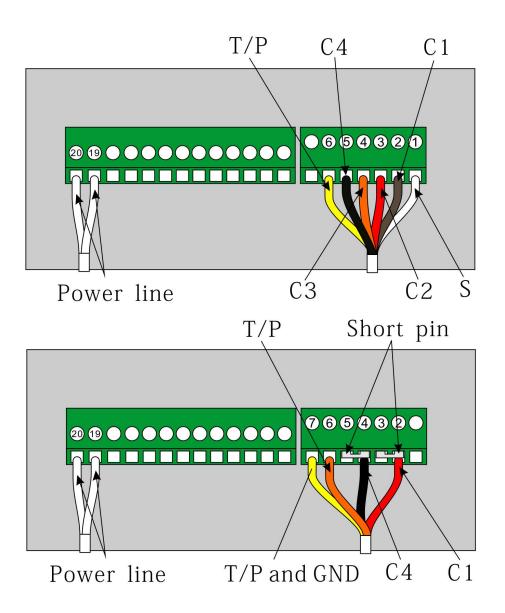

Electrode connection figure

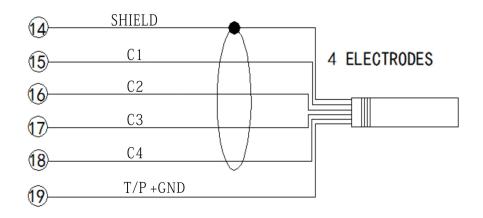


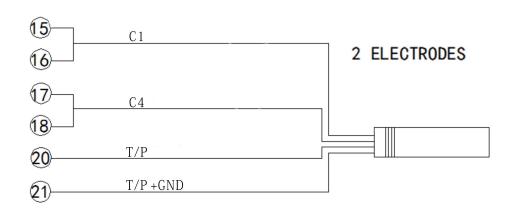

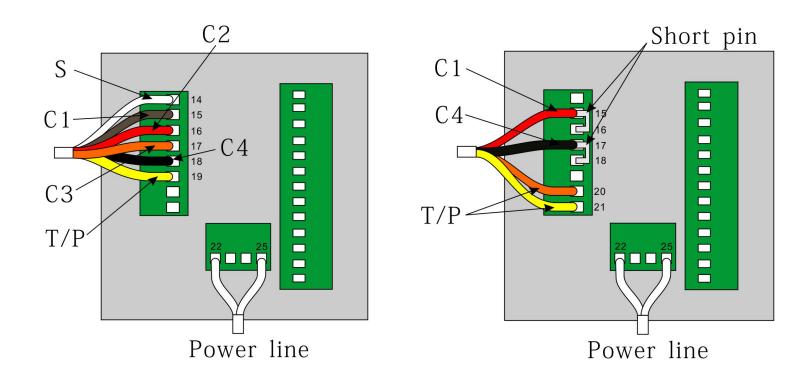


Relay contact protection

Electrical spark at the relay contact may affect the life of the relay, especially in an inductive and capacitive load. In order to inhibit the spark and arc, user should use an RC circuit to extend the life of the relay.

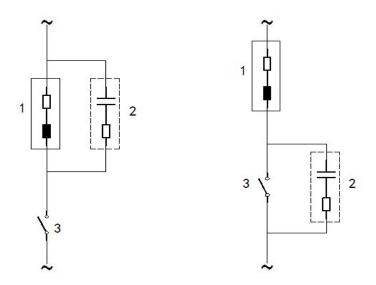


AC protection, use for inductive load

- 1. load
- 2. RC eliminate spark, using in 220VAC, R=100 ohm1W,
- 3. Relay contact

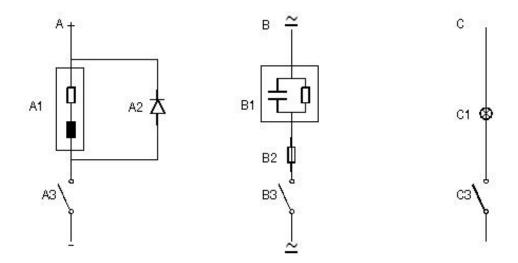

- A. DC protection ,A1: inductive load A2: 1N4007, A3: relay contact
- B. AC/DC protection ,B1: capacitive load ,B2: 0.8 Ohm/1W (DC24V) ,B3: relay contact
- C. Resistive load ,C1:lamp bulb ,C3:relay contact

Display

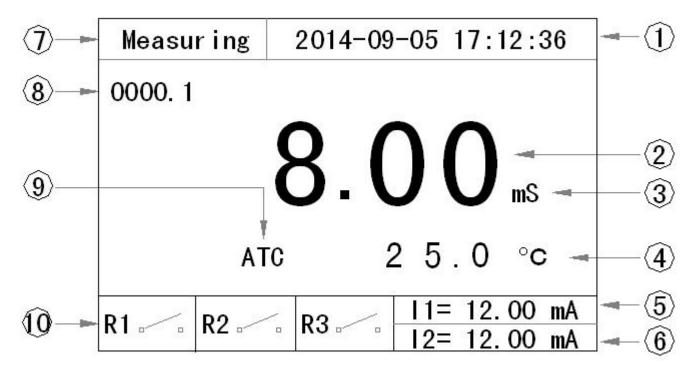


- 1. Date and time
- 2. Main display
- 3. Unit
- 4. Temperature and unit
- 5. First current output
- 6. Second current output
- 7. Measurement status and Error indicator, there is no display if meter is in keeping mode
- 8. Count down timer: cycle time/clean time, it also displays the "delay" when relay3 has a delay enabled.
- 9. Temp. compensation: auto(ATC) or manual(MTC)
- 10. Relay indicator

Note:

If the EC readings are over the range, it will display 99.99/999.9/9999 If the temperature readings are under or over the range, it will display -99.9/999.9.

Key

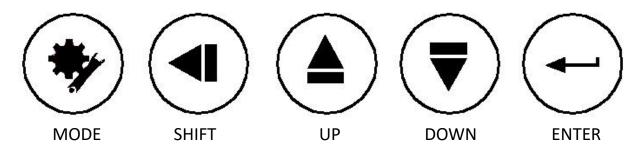

Key name	Meas. status	Setting status	Cal. status	Record status
MODE	Enter password	Exit	Exit	Exit
SHIFT	none	Move digit	Mode digit	Mode digit
UP	Enter record	Inc	Inc	Inc
DOWN	None	Dec	Dec	Dec
ENTER	ON/OFF back light	Enter	Enter	Enter

Keeping mode

Keeping mode is a safe mode. It is for Calibration, Setting, Record and Clean. In this mode all the relays are open(inactive), current output follows the setting by user(last current or fixed current).

The instrument will enter keeping mode when user presses into Calibration, Setting, Record or the instrument works in clean mode.

It will in keeping mode around 10 seconds when it goes back to measurement mode form the above mentioned 4 modes then left keeping mode.

The instrument will go into the keeping mode when turn on the power. Current output in keeping mode:

User has two choices: fixed current output or last current output.

Fixed current: User can set the output current from 4.00 to 20.00mA when

instrument goes into keeping mode.


Last current: User can set the output current keep at the last current when

instrument goes into keeping mode.

Relays in keeping mode: All relays are opened.(inactive)

Setting

Press MODE key to enter the password menu and then press UP/DOWN/SHIFT key to input password 1200 then press ENTER will enter to setting mode or press MODE key to exit. If no key is be pressed and over 10 minutes then it will go back to measurement mode.

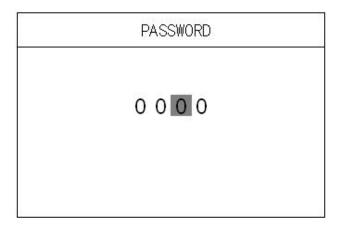


PASSWORD	
1 2 0 0	

Main display

Press UP/DOWN key to choose functions, press ENTER key enter the function.

CONFIGURATION	
■ Current1 Settings	
□ Current2 Settings	
□ Relay1 Settings	
□ Relay2 Settings	
□ Relay3 Settings	
□ Measurement Settings	
□ Temperature Settings	
□ RS485 Settings	

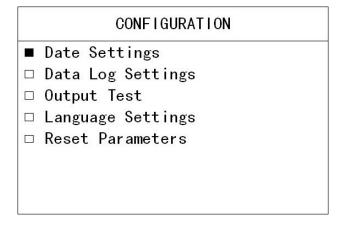


Page1 Page2

Notices:


- 1. When the input data is not in correct range then it will display ERROR on the top of LCD
- 2. After input data user needs to press ENTER to save the data.
- 3. Press MODE to exit.
- 4. No key is be pressed in 10 minutes then it will go back to measurement mode.

Current 1 settings

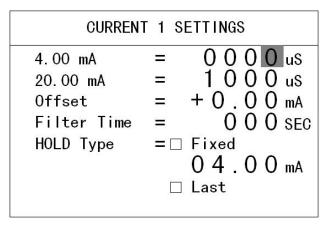

- 1. Set the corresponding 4.00mA to EC/Resistivity/Salinity/TDS.
- 2. Set the corresponding 20.00mA to EC/ Resistivity/Salinity/TDS, the difference between 4.00mA and 20.00 mA at least for EC is 1.00/10.0/100(according to the range),
 - for Resistivity is 1.00, for Salinity is 1.00, for TDS is 100.
- 3. Set the offset current ,the range is \pm 1.00mA.
- 4. The filter time range is 0-120 seconds, the low pass filter of software will active when the current from one point to another point if user sets the filter time.
- 5. Set the current 1 output mode(fixed / last) when instrument enter into keeping mode.

Current 2 settings

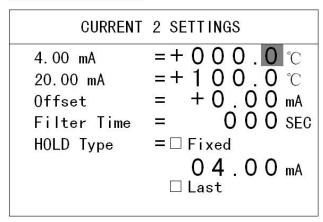

- 1. Set the corresponding 4.00mA to temperature.
- 2. Set the corresponding 20.00mA to temperature, the difference at least between 4.00mA and 20.00 mA is 10.0°C.
- 3. Set the offset current of temperature, the range is $\pm\, 1.00 \text{mA}.$
- 4. The filter time range is 0-120 seconds, the low pass filter of software will active when the current from one point to another point if user sets the filter time.
- 5. Set the current 2 output mode(fixed / last) when instrument enter into keeping mode. **Relay 1 settings**

RELAY 1 SETTINGS ON/OFF = ■ ON OFF Close S. P. = 1 0 0 0 uS Open S. P. = 0 4 0 0 uS Delay Time = 0 0 0 0 SEC

- Press UP/DOWN key to ON/OFF (enable/ disable) relay1.
- 2. Close set point: active point for EC/ Resistivity/Salinity/TDS.
- 3. Open set point: inactive point for EC/ Resistivity/Salinity/TDS.
- 4. Delay time: the range is 0-120 seconds. Relay needs to delay first then active if the measuring data is reach to close set point.

Ex: If user wants turn on the pump at EC

1000uS and turn off it at EC 400uS, then the close S.P. needs to set to 1000uS, Open S.P.

sets to 400uS.


Relay 2 settings

RELAY	2 SETTIN	GS			
ON/OFF	= ■ ON				
Close S.P. Open S.P. Delay Time	100	0 4	0	0	

- 1. Press UP/DOWN key to ON/OFF (enable/disable) relay2.
- 2. Close set point: active point for EC/Resistivity/Salinity/TDS.
- 3. Open set point: inactive point for EC/ Resistivity/Salinity/TDS.
- 4. Delay time: the range is 0-120 seconds. Relay needs to delay first then active if the measuring data is reach to close set point.

Ex: If user wants turn on the pump at EC400uS and turn off it at EC 1000uS, then the close S.P. needs to set to 400uS, Open S.P. sets to 1000uS.

Relay 3 settings

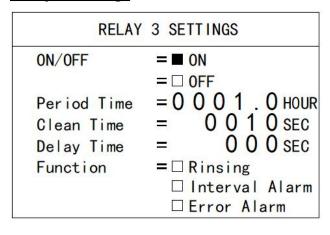


- 1. Press UP/DOWN key to ON/OFF (enable/disable) relay3.
- 2. Period time: The period for Rinsing or interval function.
- 3. Clean time: When period is timeout then relay active.
- 4. Delay time: the range is 0-120 seconds. Relay needs to delay first then active if the period is timeout.
- 5. Function: Press UP/DOWN key to choose Rinsing/Interval/Error.

Notice:

- 1. Rinsing: when period timeout then clean-relay will active, when clean time is timeout the repeat count for the period.
- 2. Interval alarm: When period timeout then clean-relay active until user resets the interval then the clean-relay inactive and repeat count for the period.
- 3. Error alarm: The clean-relay active when there is a error produce. No delay time function in this mode.

Measurement settings

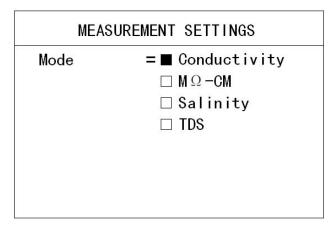

MEASUREMENT SETTINGS				
Range	= □ 20.00 uS			
	□ 200. 0 uS			
	■ 2000 uS			
	□ 20.00 mS			
	□ 200. 0 mS			
	□ 2000 mS			
Offset	= + 0 0 0 us			
Filter	= 01			

- 1. Choose the mode for measuring, press UP/DOWN key to choose, press ENTER to next.
- 2. The Range selection for EC only.
- 3. Offset , range for EC is ± 1.00 uS/ ± 10.0 uS/ ± 10.0 uS/ ± 1.00 mS/ ± 10.0 mS/ ± 10.0 mS, for Resistivity is ± 1.00 M Ω , for Salinity is ± 1.00 g/Kg, for TDS is ± 100 ppm
- 4. Filter: Range 0-10.

Notice: If the reading is not stable then user can set the filter to average the readings.

Temperature settings

TEMPERAT	URE SETTINGS
Automatic	= ■ Auto
	☐ Manua I
Probe	= □ Pt 1000
	□ NTC 30K
Offset	= +0.0°C
Manual Meas.	=+025.0°c
Manual Cal.	= 25.0°c

TEMPE	RATURE SETTSINGS
Display	= ■ YES □ NO

- 1. Temperature compensation setting, press UP/DOWN key to choose.
- 2. Temperature probe, press UP/DOWN key to choose.
- 3. Temperature offset ,the range is ± 5.00 °C.
- 4. Temperature for measuring when user set the temperature to manual.
- 5. Temperature for calibration mode when user sets the temperature to manual.
- 6. Temperature display: display the temperature on measurement mode or not. Notice:
- When user chooses AUTO and doesn't connect temperature probe then the display will not correct.
- 2. When select the probe needs to make sure the probe type is correct.
- 3. Manual measurement: the instrument will use this temperature for compensation in

measurement mode when user chooses Manual.

4. Manual calibration: the instrument will use this temperature for compensation in calibration mode when user chooses Manual.

RS485 settings

RS485	SETTSINGS
ID Address	= 0 0 1
Baud Rate	= □ 9600
	= □ 19200
	= 🗆 38400


- 1. ID address:1-255.
- 2. Baud rate ,press UP/DOWN key to choose.

Date settings

Dit	TE SETTINGS
Year	= 2 0 1 5
Month	= 0 8
Day	=15
Hour	= 1 3
Minute	= 3 6
Second	= 0 4

Press UP/DOWN key to set the date. When power off the date will be kept for around 2 days.

Data log settings

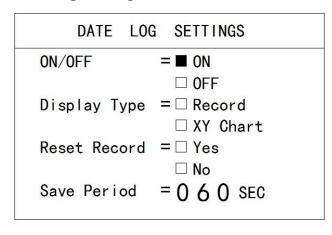


- 1. Press UP/DOWN key to ON/OFF (enable/disable) this function.
- 2. Display type, press UP/DOWN key to choose
- 3. Erase all the records.
- 4. Saving period from 5 to 120 second.

Notice:

- 1. When user chooses ON, then it will save measuring data follow the save period time.
- 2. Display type: Record, display the detail of record(5 records in one page), XY chart, display a chart.(150 records in one page)

3. When reset the records, it will spend around 10 seconds.

Output test

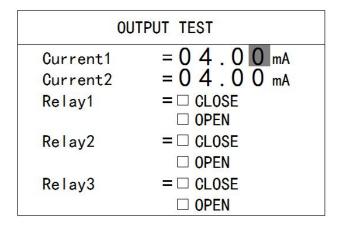

- 1. Current 1 output: 4.00-20.00mA, press UP/DOWN to set.
- 2. Current 2 output: 4.00-20.00mA, press UP/DOWN to set.
- 3. Relay 1 output, press UP/DOWN to choose.
- 4. Relay 2 output, press UP/DOWN to choose.
- 5. Relay 3 output, press UP/DOWN to choose.


Notice: This function for testing the output only.

Language settings



Press UP/DOWN key to choose the language.

Reset parameters

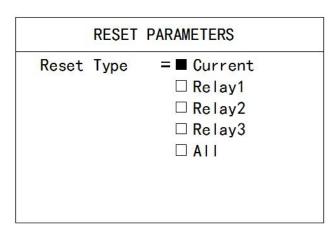


Press UP/DOWN key to choose the reset.

Notice: The reset will not affect the calibrated parameters.

Record query

Press UP key at the measurement mode to enter record query mode.

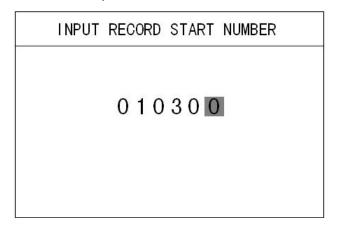


Press UP/DOWN and SHIFT key to input record number then press ENTER key enter or press MODE key exit.

Display EC record at record


	RECORD (020300	
15-08-14	0200	uS	
21:20:49	025.0	° C	
15-08-14	0201	uS	
21:20:59	025.0	° С	
15-08-14	0201	uS	
21:21:09	025.0	° C	
15-08-14	0201	uS	
21:21:19	025.0	∘ C	
15-08-14	0201	uS	
21:21:29	025. 0	° C	


Display EC record at XY chart

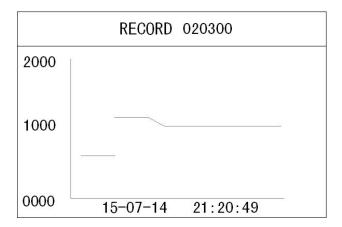

EC Calibration

Press MODE key to enter the password menu and then press UP/DOWN/SHIFT key to input password 1100 then press ENTER will enter to calibration mode or press MODE key to exit. If no key is be pressed and over 10 minutes then it will go back to measurement mode.

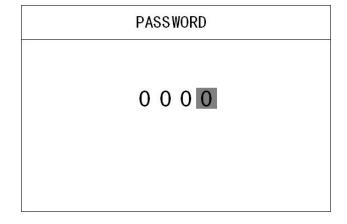

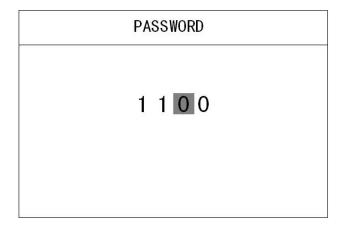

Manual

CALIBRATION

- Parameters Setting
- □ Calibration
- □ Reset Parameters

Press UP/DOWN key to select the functions and then press ENTER key to enter.

- 1. parameters setting: Input the parameters.
- 2. Calibration: Calibrate the EC.
- 3. Reset parameters: reset all of the calibrated parameters to default.

Notice:

If the cell constant is over than $\pm 30\%$, user should Replace the new electrode.

Parameters Setting

PARAMETERS SETTING

Temp. Coef. = 02.00%Ref. Temp. = 25.0%

- 1. Temperature Coefficient of solution: the range is form 0.01 to 40.00%
- 2. Reference Temperature: the range is from 15.0 to 35.0 $\,^{\circ}$ C

Calibration

CALIBRATION

Last Cell = 0.1.0000EC Reading = 1.043 uS Temerature = +0.25.0 °C Input Cell = 0.1.2000

Input Cell Constant

- 1. Put the electrode to the standard solution.
- 2. It will display the EC reading.
- 3. When the EC reading is stable then press UP/DOWN key to modify the cell constant to make the EC reading correspond to the standard solution.
- 4. If the EC Reading is over the EC range or the temperature is over 0.0-60.0 ℃ then it will display error message on the button of LCD.

Reset parameters

RESET PARAMETERS	
RESET	

This will reset all of the calibrated parameters to default.

<u>Default</u>

EC 20.00mA	corresponding	1000	uS	range: 100 - 2000
EC 4.00mA	corresponding	0	uS	range: 0 - 1900
				difference: 100
RES 20.00mA	corresponding	10.00	ΜΩ	range: 1.00 - 20.00
RES 4.00mA	corresponding	0.00	$M\Omega$	range: 0.00 - 19.00
				difference: 1.00
SAL 20.00mA	corresponding	10.00	g/Kg	range: 1.00 - 78.00
SAL 4.00mA	corresponding	0.00	g/Kg	range: 0.00 - 77.00
				difference: 1.00
TDS 20.00mA	corresponding	1000	ppm	range: 100 - 133000
TDS 4.00mA	corresponding	0	ppm	range: 0 - 132900
				difference: 100
Temp. 20.00m	A corresponding	100.0	$^{\circ}$ C	range: 0.0 - 130
Temp. 4.00m/	A corresponding	0.0	$^{\circ}$ C	range: -10.0 - 120.0
				difference: 10.0
Current 1 out	out offset	0.00	mA	range: +/- 1.00
Current 2 out	out offset	0.00	mA	range: +/- 1.00
Current 1 filte	r	0	second	range: 0 - 120 second
Current 2 filte	r	0	second	range: 0 - 120 second
Current 1 fixed	d output	4.00	mA	range: 4.00 - 20.00
Current 2 fixed	d output	4.00	mA	range: 4.00 - 20.00
Current 1 HOL	D type	last		range: fixed/last
Current 2 HOL	D type	last		range: fixed/last
Relay 1 EC clo	se S.P.	1000	uS	range: 0 - 2000
Relay 1 EC ope	en S.P.	10	uS	range: 0 - 2000
				difference : 1

Relay 1 RES close S.P.	10.00	ΜΩ	range: 0.00 - 20.00
Relay 1 RES open S.P.	0.1	ΜΩ	range: 0.00 - 20.00
			difference : 0.01
Relay 1 SAL close S.P.	10.00	g/Kg	range: 0.00 - 78.00
Relay 1 SAL open S.P.	0.1	g/Kg	range: 0.00 - 78.00
			difference : 0.01
Relay 1 TDS close S.P.	1000	ppm	range: 0 - 133000
Relay 1 TDS open S.P.	10	ppm	range: 0 - 133000
			difference : 1
Relay 1 delay time	0	second	range: 0 - 120
Relay 2 EC close S.P.	1000	uS	range: 0 - 2000
Relay 2 EC open S.P.	10	uS	range: 0 - 2000
			difference :1
Relay 2 RES close S.P.	10.00	ΜΩ	range: 0.00 - 20.00
Relay 2 RES open S.P.	0.1	ΜΩ	range: 0.00 - 20.00
			difference :0.01
Relay 2 SAL close S.P.	10.00	g/Kg	range: 0.00 - 78.00
Relay 2 SAL open S.P.	0.1	g/Kg	range: 0.00 - 78.00
			difference :0.01
Relay 2 TDS close S.P.	1000	ppm	range: 0 - 133000
Relay 2 TDS open S.P.	10	ppm	range: 0 - 133000
			difference :1
Relay 2 delay time	0	second	range: 0 - 120
Relay 3 period time	1.0	hour	range: 0 - 1000.0
Relay 3 clean time	10	second	range: 0 - 1000
Relay 3 delay time	0		range: 0 - 120
Relay 3 function	error alarn	n	range: clean/period alarm/
			error alarm
Saving period	60	second	range: 5 - 120
ID address	1		range: 1 - 255
Baud rate	9600		range: 9600,19200,38400
EC Offset	0	uS	range: +/-100
Resistivity Offset	0.00	ΜΩ	range: +/-1.00
Salinity Offset	0.00	g/Kg	range: +/-1.00
TDS Offset	0	ppm	range: +/-100
Mode	EC		range: EC,RES,SAL,TDS
Measuring range	0-2000uS		range: 0-20.00uS/0-200.0uS
			0-2000uS/0-20.00mS
			0-200.0mS/0-2000mS
Temp. Offset	0.0	$^{\circ}$ C	range: +/- 5.0
Manual Temp. for measurement	25.0	$^{\circ}$ C	range: -10.0 - 130.0

Manual Temp. for calibration	25.0	$^{\circ}$ C	range: 0.0 - 60.0	
Language	English		range: English/traditional	
			Chinese/simple Chinese	
Filter	1		range: 0 - 10	
Temp. compensation	ATC		range: ATC/MTC	
Temp. probe	NTC30K		range: Pt1000, NTC30K	
Record type	record		range: record/XY chart	

Password

Press MODE key

1100:Calibration mode

1200:Setting mode

If no key is be pressed and over 10 minutes then it will go back to measurement mode.

Error code

Error 01	memory error
Error 02	reading is over maximum
Error 03	reading is under minimum
Error 04	temperature is over maximum
Error 05	temperature is under minimum
Error 06	current 1 output is over 20.5 mA, the maximum is 22.00mA
Error 07	current 1 output is under 3.8 mA, the minimum is 3.5mA
Error 08	current 2 output is over 20.5 mA, the maximum is 22.00mA
Error 09	current 2 output is under 3.8 mA, the minimum is 3.5mA
Error 10	record error
Error 11	ADC damage
Error 99	default parameters lost

RS485 command

The instrument use the standard Mod bus-RTU protocol, all of the data are word type(2 bytes), the range is $-32767 \sim 32767$,16 system.

PC command:

	ID address	command	Start address	Data number	CRC16
length	1 byte	1byte	2 byte	2 byte	2 byte

Ex.	0x01	0x03	0x0001	0x0001	0xD5CA

Instrument response:

	ID address	command	Data number	data	CRC16
length	1 byte	1 byte	1byte	N byte	2 byte
Ex.	0x01	0x03	0x02	0x02 0xBC	0xB895

If response is 01,the command is wrong. If response is 02,the address is not correct. If response is 03,data number is not correct.

command 03: read the settings command 04: read the readings

04:definition

address

(00)	0x00	EC/RES/SAL/TDS reading1	reading: floating unit is uS
(01)	0x01	EC/RES/SAL/TDS reading2	reading:
		Reading 1 and reading 2 combin	e to a floating
(02)	0x02	EC/RES/SAL/TDS current	reading:X 0.01
(03)	0x03	Temperature	reading:X 0.1
(04)	0x04	Temperature current	reading:X 0.01
(05)	0x05	Error code	reading:X 1
(06)	0x06		
(07)	0x07		
(80)	0x08		
(09)	0x09	Model type	fix to 3

03:definition

Address

(00)	0x00	EC 20.00mA corresponding	reading:X0.01/0.1/1
(01)	0x01	EC 4.00mA corresponding	reading:X0.01/0.1/1
(02)	0x02	RES 20.00mA corresponding	reading:X0.01
(03)	0x03	RES 4.00mA corresponding	reading:X0.01
(04)	0x04	SAL 20.00mA corresponding	reading:X0.01
(05)	0x05	SAL 4.00mA corresponding	reading:X0.01
(06)	0x06	TDS1 20.00mA corresponding	reading:X1
(07)	0x07	TDS2 20.00mA corresponding	reading:X1
(80)	0x08	TDS1 4.00mA corresponding	reading:X1
(09)	0x09	TDS2 4.00mA corresponding	reading:X1
(10)	0x0A	Temp. 20.00mA corresponding	reading:X 0.1

(12) 0x0C Current 1 offset reading:X0.01 (13) 0x0D Current 2 offset reading:X0.01 (14) 0x0E Current 1 filter reading:X1 (15) 0x0F Current 2 filter reading:X0.01 (16) 0x10 Current 2 fixed current reading:X0.01 (17) 0x11 Current 2 HOLD type reading:X0.01 (18) 0x12 Current 2 HOLD type reading:X1 0=fixed,1=last (19) 0x13 Current 2 HOLD type reading:X1 0=fixed,1=last (20) 0x14 Relay 1 EC close S.P. reading:X1 0=fixed,1=last (20) 0x14 Relay 1 EC close S.P. reading:X0.01/0.1/1 reading:X0.01/0.1/1 (21) 0x15 Relay 1 EC close S.P. reading:X0.01 reading:X0.01 (22) 0x16 Relay 1 FRS close S.P. reading:X0.01 reading:X0.01 (23) 0x19 Relay 1 TDS1 close S.P. reading:X1 reading:X1 (27) 0x18 Relay 1 TDS1 close S.P. reading:X1	(11)	0x0B	Temp. 4.00mA corresponding	reading:X 0.1
(13) 0x0D Current 2 offset reading:X0.01 (14) 0x0E Current 1 filter reading:X1 (15) 0x0F Current 1 fixed reading:X0.01 (16) 0x10 Current 1 fixed current reading:X0.01 (17) 0x11 Current 2 fixed current reading:X0.01 (18) 0x12 Current 2 HOLD type reading:X0.01/0.1/1 (19) 0x13 Current 2 HOLD type reading:X0.01/0.1/1 (20) 0x14 Relay 1 EC close S.P. reading:X0.01/0.1/1 (21) 0x15 Relay 1 ES close S.P. reading:X0.01 (22) 0x16 Relay 1 RES close S.P. reading:X0.01 (23) 0x17 Relay 1 SAL close S.P. reading:X0.01 (24) 0x18 Relay 1 TDS1 close S.P. reading:X0.01 (25) 0x19 Relay 1 TDS1 close S.P. reading:X1 (27) 0x18 Relay 1 TDS2 close S.P. reading:X1 (28) 0x1C Relay 1 TDS2 open S.P. reading:X1 (29) 0x1D <td>-</td> <td>0x0C</td> <td></td> <td>3</td>	-	0x0C		3
(14) 0x0E Current 2 filter reading:X1 (15) 0x0F Current 2 filter reading:X0.01 (16) 0x10 Current 1 fixed current reading:X0.01 (17) 0x11 Current 2 fixed current reading:X0.01 (18) 0x12 Current 1 HOLD type reading:X1 0=fixed,1=last (19) 0x13 Current 2 HOLD type reading:X0.01/0.1/1 reading:X0.01/0.1/1 (20) 0x14 Relay 1 EC close S.P. reading:X0.01/0.1/1 reading:X0.01/0.1/1 (21) 0x15 Relay 1 EC close S.P. reading:X0.01 reading:X0.01 (22) 0x16 Relay 1 ES close S.P. reading:X0.01 (23) 0x17 Relay 1 SAL close S.P. reading:X0.01 (24) 0x18 Relay 1 SAL close S.P. reading:X0.01 (25) 0x19 Relay 1 TDS1 close S.P. reading:X0.01 (26) 0x1A Relay 1 TDS2 close S.P. reading:X1 (27) 0x1B Relay 1 TDS2 open S.P. reading:X1 (28) 0x1E<		0x0D	Current 2 offset	_
(15)		0x0E	Current 1 filter	reading:X1
(16) 0x10 Current 1 fixed current reading:X0.01 (17) 0x11 Current 2 fixed current reading:X0.01 (18) 0x12 Current 1 HOLD type reading:X1 0=fixed,1=last (19) 0x13 Current 2 HOLD type reading:X0.01/0.1/1 (20) 0x14 Relay 1 EC open S.P. reading:X0.01/0.1/1 (21) 0x15 Relay 1 EC open S.P. reading:X0.01 (22) 0x16 Relay 1 RES close S.P. reading:X0.01 (23) 0x17 Relay 1 SAL close S.P. reading:X0.01 (24) 0x18 Relay 1 SAL close S.P. reading:X0.01 (25) 0x19 Relay 1 SAL close S.P. reading:X0.01 (26) 0x1A Relay 1 TDS1 close S.P. reading:X0.01 (27) 0x1B Relay 1 TDS2 close S.P. reading:X1 (28) 0x1C Relay 1 TDS2 open S.P. reading:X1 (29) 0x1D Relay 1 TDS2 open S.P. reading:X1 (31) 0x1F Relay 2 EC close S.P. reading:X0.01/0.1/1	-	0x0F	Current 2 filter	reading:X1
(17) 0x11 Current 2 fixed current reading:X0.01 (18) 0x12 Current 1 HOLD type reading:X1 0=fixed,1=last (19) 0x13 Current 2 HOLD type reading:X1 0=fixed,1=last (20) 0x14 Relay 1 EC close S.P. reading:X0.01/0.1/1 (21) 0x15 Relay 1 EC close S.P. reading:X0.01 (22) 0x16 Relay 1 RES close S.P. reading:X0.01 (23) 0x17 Relay 1 SAL close S.P. reading:X0.01 (24) 0x18 Relay 1 SAL close S.P. reading:X0.01 (25) 0x19 Relay 1 SAL close S.P. reading:X0.01 (26) 0x14 Relay 1 TDS1 close S.P. reading:X1 (27) 0x18 Relay 1 TDS2 open S.P. reading:X1 (28) 0x1C Relay 1 TDS2 open S.P. reading:X1 (29) 0x1B Relay 1 TDS2 open S.P. reading:X1 (31) 0x1E Relay 2 EC close S.P. reading:X0.01/0.1/1 (32) 0x20 Relay 2 ES close S.P. reading:X0.01	-	0x10	Current 1 fixed current	reading:X0.01
(18) 0x12 Current 1 HOLD type reading:X1 0=fixed,1=last (19) 0x13 Current 2 HOLD type reading:X0.01/0.1/1 (20) 0x14 Relay 1 EC close S.P. reading:X0.01/0.1/1 (21) 0x15 Relay 1 EC open S.P. reading:X0.01 (22) 0x16 Relay 1 RES close S.P. reading:X0.01 (23) 0x17 Relay 1 RES open S.P. reading:X0.01 (24) 0x18 Relay 1 SAL close S.P. reading:X0.01 (25) 0x19 Relay 1 SAL close S.P. reading:X0.01 (26) 0x1A Relay 1 TDS1 close S.P. reading:X0.01 (27) 0x1B Relay 1 TDS2 close S.P. reading:X1 (28) 0x1C Relay 1 TDS2 open S.P. reading:X1 (29) 0x1D Relay 1 TDS2 open S.P. reading:X1 (30) 0x1E Relay 1 TDS2 open S.P. reading:X0.01/0.1/1 (31) 0x1F Relay 2 EC close S.P. reading:X0.01/0.1/1 (32) 0x20 Relay 2 RES open S.P. reading:X0.01		0x11	Current 2 fixed current	reading:X0.01
(20) 0x14 Relay 1 EC close S.P. reading:X0.01/0.1/1 (21) 0x15 Relay 1 EC open S.P. reading:X0.01/0.1/1 (22) 0x16 Relay 1 RES close S.P. reading:X0.01 (23) 0x17 Relay 1 RES open S.P. reading:X0.01 (24) 0x18 Relay 1 SAL close S.P. reading:X0.01 (25) 0x19 Relay 1 TDS1 close S.P. reading:X0.01 (26) 0x1A Relay 1 TDS2 close S.P. reading:X1 (27) 0x1B Relay 1 TDS2 close S.P. reading:X1 (28) 0x1C Relay 1 TDS2 open S.P. reading:X1 (29) 0x1D Relay 1 TDS2 open S.P. reading:X1 (30) 0x1E Relay 1 delay time reading:X1 (31) 0x1F Relay 2 EC close S.P. reading:X0.01/0.1/1 (32) 0x20 Relay 2 EC open S.P. reading:X0.01/0.1/1 (33) 0x21 Relay 2 RES open S.P. reading:X0.01 (34) 0x22 Relay 2 RES open S.P. reading:X0.01 (35)	-	0x12	Current 1 HOLD type	reading:X1 0=fixed,1=last
(21) 0x15 Relay 1 EC open S.P. reading:X0.01/0.1/1 (22) 0x16 Relay 1 RES close S.P. reading:X0.01 (23) 0x17 Relay 1 RES open S.P. reading:X0.01 (24) 0x18 Relay 1 SAL close S.P. reading:X0.01 (25) 0x19 Relay 1 SAL open S.P. reading:X0.01 (26) 0x1A Relay 1 TDS1 close S.P. reading:X0.01 (27) 0x1B Relay 1 TDS2 close S.P. reading:X1 (28) 0x1C Relay 1 TDS1 open S.P. reading:X1 (29) 0x1D Relay 1 TDS2 open S.P. reading:X1 (30) 0x1E Relay 1 TDS2 open S.P. reading:X1 (30) 0x1E Relay 1 TDS2 open S.P. reading:X1 (31) 0x1F Relay 2 EC close S.P. reading:X1 (32) 0x20 Relay 2 EC close S.P. reading:X0.01/0.1/1 (33) 0x21 Relay 2 RES close S.P. reading:X0.01 (34) 0x22 Relay 2 SAL close S.P. reading:X0.01 (35) 0	(19)	0x13	Current 2 HOLD type	reading:X1 0=fixed,1=last
(22) 0x16 Relay 1 RES close S.P. reading:X0.01 (23) 0x17 Relay 1 RES open S.P. reading:X0.01 (24) 0x18 Relay 1 SAL close S.P. reading:X0.01 (25) 0x19 Relay 1 SAL close S.P. reading:X0.01 (26) 0x1A Relay 1 TDS1 close S.P. reading:X1 (27) 0x1B Relay 1 TDS2 close S.P. reading:X1 (28) 0x1C Relay 1 TDS2 open S.P. reading:X1 (29) 0x1D Relay 1 TDS2 open S.P. reading:X1 (30) 0x1E Relay 1 delay time reading:X1 (31) 0x1F Relay 2 EC close S.P. reading:X0.01/0.1/1 (32) 0x20 Relay 2 EC open S.P. reading:X0.01/0.1/1 (33) 0x21 Relay 2 RES close S.P. reading:X0.01 (34) 0x22 Relay 2 SAL close S.P. reading:X0.01 (35) 0x23 Relay 2 SAL open S.P. reading:X0.01 (37) 0x25 Relay 2 TDS1 close S.P. reading:X1 (38) 0x2	(20)	0x14	Relay 1 EC close S.P.	reading:X0.01/0.1/1
(23) 0x17 Relay 1 RES open S.P. reading:X0.01 (24) 0x18 Relay 1 SAL close S.P. reading:X0.01 (25) 0x19 Relay 1 SAL open S.P. reading:X0.01 (26) 0x1A Relay 1 TDS1 close S.P. reading:X1 (27) 0x1B Relay 1 TDS2 close S.P. reading:X1 (28) 0x1C Relay 1 TDS2 open S.P. reading:X1 (30) 0x1E Relay 1 delay time reading:X1 (31) 0x1F Relay 2 EC close S.P. reading:X0.01/0.1/1 (32) 0x20 Relay 2 ES open S.P. reading:X0.01/0.1/1 (33) 0x21 Relay 2 RES open S.P. reading:X0.01 (34) 0x22 Relay 2 SAL close S.P. reading:X0.01 (35) 0x23 Relay 2 TDS1 close S.P. reading:X0.01 (37) 0x25 Relay 2 TDS2 close S.P. reading:X1 (38) 0x26 Relay 2 TDS2 open S.P. reading:X1 (40) 0x28 Relay 2 TDS2 open S.P. reading:X1 (41) 0x29 </td <td>(21)</td> <td>0x15</td> <td>Relay 1 EC open S.P.</td> <td>reading:X0.01/0.1/1</td>	(21)	0x15	Relay 1 EC open S.P.	reading:X0.01/0.1/1
(24) 0x18 Relay 1 SAL close S.P. reading:X0.01 (25) 0x19 Relay 1 SAL open S.P. reading:X0.01 (26) 0x1A Relay 1 TDS1 close S.P. reading:X1 (27) 0x1B Relay 1 TDS2 close S.P. reading:X1 (28) 0x1C Relay 1 TDS1 open S.P. reading:X1 (29) 0x1D Relay 1 delay time reading:X1 (30) 0x1E Relay 1 delay time reading:X0.01/0.1/1 (31) 0x1F Relay 2 EC close S.P. reading:X0.01/0.1/1 (32) 0x20 Relay 2 EC open S.P. reading:X0.01/0.1/1 (33) 0x21 Relay 2 RES open S.P. reading:X0.01 (34) 0x22 Relay 2 SAL close S.P. reading:X0.01 (35) 0x23 Relay 2 TDS1 close S.P. reading:X0.01 (36) 0x24 Relay 2 TDS2 close S.P. reading:X1 (38) 0x26 Relay 2 TDS2 open S.P. reading:X1 (40) 0x28 Relay 2 TDS2 open S.P. reading:X1 (41) 0x2	(22)	0x16	Relay 1 RES close S.P.	reading:X0.01
(25) 0x19 Relay 1 SAL open S.P. reading:X0.01 (26) 0x1A Relay 1 TDS1 close S.P. reading:X1 (27) 0x1B Relay 1 TDS2 close S.P. reading:X1 (28) 0x1C Relay 1 TDS1 open S.P. reading:X1 (29) 0x1D Relay 1 TDS2 open S.P. reading:X1 (30) 0x1E Relay 1 delay time reading:X1 (31) 0x1F Relay 2 EC close S.P. reading:X0.01/0.1/1 (32) 0x20 Relay 2 EC open S.P. reading:X0.01/0.1/1 (33) 0x21 Relay 2 RES close S.P. reading:X0.01 (34) 0x22 Relay 2 RES open S.P. reading:X0.01 (35) 0x23 Relay 2 SAL close S.P. reading:X0.01 (36) 0x24 Relay 2 TDS1 close S.P. reading:X1 (38) 0x26 Relay 2 TDS2 close S.P. reading:X1 (39) 0x27 Relay 2 TDS1 open S.P. reading:X1 (40) 0x28 Relay 2 TDS2 open S.P. reading:X1 (41) 0x29	(23)	0x17	Relay 1 RES open S.P.	reading:X0.01
(26) 0x1A Relay 1 TDS1 close S.P. reading:X1 (27) 0x1B Relay 1 TDS2 close S.P. reading:X1 (28) 0x1C Relay 1 TDS1 open S.P. reading:X1 (29) 0x1D Relay 1 TDS2 open S.P. reading:X1 (30) 0x1E Relay 1 delay time reading:X1 (31) 0x1F Relay 2 EC close S.P. reading:X0.01/0.1/1 (32) 0x20 Relay 2 EC open S.P. reading:X0.01/0.1/1 (33) 0x21 Relay 2 RES close S.P. reading:X0.01 (34) 0x22 Relay 2 RES open S.P. reading:X0.01 (35) 0x23 Relay 2 SAL close S.P. reading:X0.01 (36) 0x24 Relay 2 SAL open S.P. reading:X0.01 (37) 0x25 Relay 2 TDS1 close S.P. reading:X1 (38) 0x26 Relay 2 TDS2 close S.P. reading:X1 (40) 0x28 Relay 2 TDS2 open S.P. reading:X1 (41) 0x29 Relay 3 clean time reading:X1 (42) 0x2A	(24)	0x18	Relay 1 SAL close S.P.	reading:X0.01
(27) 0x1B Relay 1 TDS2 close S.P. reading:X1 (28) 0x1C Relay 1 TDS1 open S.P. reading:X1 (29) 0x1D Relay 1 TDS2 open S.P. reading:X1 (30) 0x1E Relay 1 delay time reading:X1 (31) 0x1F Relay 2 EC close S.P. reading:X0.01/0.1/1 (32) 0x20 Relay 2 EC open S.P. reading:X0.01/0.1/1 (33) 0x21 Relay 2 RES close S.P. reading:X0.01 (34) 0x22 Relay 2 RES open S.P. reading:X0.01 (35) 0x23 Relay 2 SAL close S.P. reading:X0.01 (36) 0x24 Relay 2 SAL open S.P. reading:X0.01 (37) 0x25 Relay 2 TDS1 close S.P. reading:X1 (38) 0x26 Relay 2 TDS2 close S.P. reading:X1 (39) 0x27 Relay 2 TDS1 open S.P. reading:X1 (40) 0x28 Relay 2 delay time reading:X1 (41) 0x29 Relay 3 clean time reading:X1 (44) 0x2C <t< td=""><td>(25)</td><td>0x19</td><td>Relay 1 SAL open S.P.</td><td>reading:X0.01</td></t<>	(25)	0x19	Relay 1 SAL open S.P.	reading:X0.01
(28)0x1CRelay 1 TDS1 open S.P.reading:X1(29)0x1DRelay 1 TDS2 open S.P.reading:X1(30)0x1ERelay 1 delay timereading:X1(31)0x1FRelay 2 EC close S.P.reading:X0.01/0.1/1(32)0x20Relay 2 EC open S.P.reading:X0.01/0.1/1(33)0x21Relay 2 RES close S.P.reading:X0.01(34)0x22Relay 2 RES open S.P.reading:X0.01(35)0x23Relay 2 SAL close S.P.reading:X0.01(36)0x24Relay 2 SAL open S.P.reading:X0.01(37)0x25Relay 2 TDS1 close S.P.reading:X1(38)0x26Relay 2 TDS2 close S.P.reading:X1(39)0x27Relay 2 TDS1 open S.P.reading:X1(40)0x28Relay 2 TDS2 open S.P.reading:X1(41)0x29Relay 3 clean periodreading:X1(42)0x2ARelay 3 clean timereading:X1(44)0x2CRelay 3 delay timereading:X1(44)0x2DRelay 3 functionreading:X1(45)0x2DRelay 3 functionreading:X1(46)0x2ERecord saving timereading:X1(47)0x2FEC Offsetreading:X0.01/0.1/1(48)0x30Resistivity Offsetreading:X0.01(49)0x31Salinity Offsetreading:X0.01	(26)	0x1A	Relay 1 TDS1 close S.P.	reading:X1
(29) 0x1D Relay 1 TDS2 open S.P. reading:X1 (30) 0x1E Relay 1 delay time reading:X1 (31) 0x1F Relay 2 EC close S.P. reading:X0.01/0.1/1 (32) 0x20 Relay 2 EC open S.P. reading:X0.01/0.1/1 (33) 0x21 Relay 2 RES close S.P. reading:X0.01 (34) 0x22 Relay 2 RES open S.P. reading:X0.01 (35) 0x23 Relay 2 SAL close S.P. reading:X0.01 (36) 0x24 Relay 2 SAL open S.P. reading:X0.01 (37) 0x25 Relay 2 TDS1 close S.P. reading:X1 (38) 0x26 Relay 2 TDS2 close S.P. reading:X1 (39) 0x27 Relay 2 TDS1 open S.P. reading:X1 (40) 0x28 Relay 2 TDS2 open S.P. reading:X1 (41) 0x29 Relay 3 clean period reading:X0.1 (42) 0x2A Relay 3 clean time reading:X1 (44) 0x2C Relay 3 function reading:X1 (45) 0x2B R	(27)	0x1B	Relay 1 TDS2 close S.P.	reading:X1
(30) 0x1E Relay 1 delay time reading:X1 (31) 0x1F Relay 2 EC close S.P. reading:X0.01/0.1/1 (32) 0x20 Relay 2 EC open S.P. reading:X0.01/0.1/1 (33) 0x21 Relay 2 RES close S.P. reading:X0.01 (34) 0x22 Relay 2 RES open S.P. reading:X0.01 (35) 0x23 Relay 2 SAL close S.P. reading:X0.01 (36) 0x24 Relay 2 SAL open S.P. reading:X0.01 (37) 0x25 Relay 2 TDS1 close S.P. reading:X1 (38) 0x26 Relay 2 TDS2 close S.P. reading:X1 (39) 0x27 Relay 2 TDS1 open S.P. reading:X1 (40) 0x28 Relay 2 TDS2 open S.P. reading:X1 (41) 0x29 Relay 2 delay time reading:X1 (42) 0x2A Relay 3 clean period reading:X0.1 (43) 0x2B Relay 3 function reading:X1 (44) 0x2C Relay 3 function reading:X1 (45) 0x2E Record	(28)	0x1C	Relay 1 TDS1 open S.P.	reading:X1
(31) 0x1F Relay 2 EC close S.P. reading:X0.01/0.1/1 (32) 0x20 Relay 2 EC open S.P. reading:X0.01/0.1/1 (33) 0x21 Relay 2 RES close S.P. reading:X0.01 (34) 0x22 Relay 2 RES open S.P. reading:X0.01 (35) 0x23 Relay 2 SAL close S.P. reading:X0.01 (36) 0x24 Relay 2 SAL open S.P. reading:X0.01 (37) 0x25 Relay 2 TDS1 close S.P. reading:X1 (38) 0x26 Relay 2 TDS2 close S.P. reading:X1 (39) 0x27 Relay 2 TDS1 open S.P. reading:X1 (40) 0x28 Relay 2 TDS2 open S.P. reading:X1 (41) 0x29 Relay 2 delay time reading:X1 (42) 0x2A Relay 3 clean period reading:X0.1 (43) 0x2B Relay 3 function reading:X1 (44) 0x2C Relay 3 function reading:X1 (45) 0x2E Record saving time reading:X1 (47) 0x2F EC Offs	(29)	0x1D	Relay 1 TDS2 open S.P.	reading:X1
(32) 0x20 Relay 2 EC open S.P. reading:X0.01/0.1/1 (33) 0x21 Relay 2 RES close S.P. reading:X0.01 (34) 0x22 Relay 2 RES open S.P. reading:X0.01 (35) 0x23 Relay 2 SAL close S.P. reading:X0.01 (36) 0x24 Relay 2 SAL open S.P. reading:X0.01 (37) 0x25 Relay 2 TDS1 close S.P. reading:X1 (38) 0x26 Relay 2 TDS2 close S.P. reading:X1 (39) 0x27 Relay 2 TDS1 open S.P. reading:X1 (40) 0x28 Relay 2 TDS2 open S.P. reading:X1 (41) 0x29 Relay 2 delay time reading:X1 (42) 0x2A Relay 3 clean period reading:X0.1 (43) 0x2B Relay 3 delay time reading:X1 (44) 0x2C Relay 3 function reading:X1 0:clean,1:period alarm (45) 0x2E Record saving time reading:X1 0:clean,1:period alarm (47) 0x2F EC Offset reading:X0.01/0.1/1 (48) 0x30 Resistivity Offset reading:X0.01	(30)	0x1E	Relay 1 delay time	reading:X1
(33) 0x21 Relay 2 RES close S.P. reading:X0.01 (34) 0x22 Relay 2 RES open S.P. reading:X0.01 (35) 0x23 Relay 2 SAL close S.P. reading:X0.01 (36) 0x24 Relay 2 SAL open S.P. reading:X0.01 (37) 0x25 Relay 2 TDS1 close S.P. reading:X1 (38) 0x26 Relay 2 TDS2 close S.P. reading:X1 (39) 0x27 Relay 2 TDS1 open S.P. reading:X1 (40) 0x28 Relay 2 TDS2 open S.P. reading:X1 (41) 0x29 Relay 2 delay time reading:X1 (42) 0x2A Relay 3 clean period reading:X0.1 (43) 0x2B Relay 3 delay time reading:X1 (44) 0x2C Relay 3 function reading:X1 0:clean,1:period alarm (45) 0x2D Relay 3 function reading:X1 0:clean,1:period alarm (47) 0x2F EC Offset reading:X0.01/0.1/1 (48) 0x30 Resistivity Offset reading:X0.01	(31)	0x1F	Relay 2 EC close S.P.	reading:X0.01/0.1/1
(34) 0x22 Relay 2 RES open S.P. reading:X0.01 (35) 0x23 Relay 2 SAL close S.P. reading:X0.01 (36) 0x24 Relay 2 SAL open S.P. reading:X0.01 (37) 0x25 Relay 2 TDS1 close S.P. reading:X1 (38) 0x26 Relay 2 TDS2 close S.P. reading:X1 (39) 0x27 Relay 2 TDS1 open S.P. reading:X1 (40) 0x28 Relay 2 TDS2 open S.P. reading:X1 (41) 0x29 Relay 2 delay time reading:X1 (42) 0x2A Relay 3 clean period reading:X0.1 (43) 0x2B Relay 3 clean time reading:X1 (44) 0x2C Relay 3 delay time reading:X1 (45) 0x2D Relay 3 function reading:X1 (46) 0x2E Record saving time reading:X1 (47) 0x2F EC Offset reading:X0.01/0.1/1 (48) 0x30 Resistivity Offset reading:X0.01 (49) 0x31 Salinity Offset reading:X0.01	(32)	0x20	Relay 2 EC open S.P.	reading:X0.01/0.1/1
(35) 0x23 Relay 2 SAL close S.P. reading:X0.01 (36) 0x24 Relay 2 SAL open S.P. reading:X0.01 (37) 0x25 Relay 2 TDS1 close S.P. reading:X1 (38) 0x26 Relay 2 TDS2 close S.P. reading:X1 (39) 0x27 Relay 2 TDS1 open S.P. reading:X1 (40) 0x28 Relay 2 TDS2 open S.P. reading:X1 (41) 0x29 Relay 2 delay time reading:X1 (42) 0x2A Relay 3 clean period reading:X0.1 (43) 0x2B Relay 3 clean time reading:X1 (44) 0x2C Relay 3 delay time reading:X1 (45) 0x2D Relay 3 function reading:X1 (46) 0x2E Record saving time reading:X1 (47) 0x2F EC Offset reading:X0.01/0.1/1 (48) 0x30 Resistivity Offset reading:X0.01 (49) 0x31 Salinity Offset reading:X0.01	(33)	0x21	Relay 2 RES close S.P.	reading:X0.01
(36) Ox24 Relay 2 SAL open S.P. reading:X0.01 (37) Ox25 Relay 2 TDS1 close S.P. reading:X1 (38) Ox26 Relay 2 TDS2 close S.P. reading:X1 (39) Ox27 Relay 2 TDS1 open S.P. reading:X1 (40) Ox28 Relay 2 TDS2 open S.P. reading:X1 (41) Ox29 Relay 2 delay time reading:X1 (42) Ox2A Relay 3 clean period reading:X0.1 (43) Ox2B Relay 3 clean time reading:X1 (44) Ox2C Relay 3 delay time reading:X1 (45) Ox2D Relay 3 function reading:X1 O:clean,1:period alarm	(34)	0x22	Relay 2 RES open S.P.	reading:X0.01
(37) 0x25 Relay 2 TDS1 close S.P. reading:X1 (38) 0x26 Relay 2 TDS2 close S.P. reading:X1 (39) 0x27 Relay 2 TDS1 open S.P. reading:X1 (40) 0x28 Relay 2 TDS2 open S.P. reading:X1 (41) 0x29 Relay 2 delay time reading:X1 (42) 0x2A Relay 3 clean period reading:X0.1 (43) 0x2B Relay 3 clean time reading:X1 (44) 0x2C Relay 3 delay time reading:X1 (45) 0x2D Relay 3 function reading:X1 0:clean,1:period alarm (46) 0x2E Record saving time reading:X1 (47) 0x2F EC Offset reading:X0.01/0.1/1 (48) 0x30 Resistivity Offset reading:X0.01 (49) 0x31 Salinity Offset reading:X0.01	(35)	0x23	Relay 2 SAL close S.P.	reading:X0.01
(38) 0x26 Relay 2 TDS2 close S.P. reading:X1 (39) 0x27 Relay 2 TDS1 open S.P. reading:X1 (40) 0x28 Relay 2 TDS2 open S.P. reading:X1 (41) 0x29 Relay 2 delay time reading:X1 (42) 0x2A Relay 3 clean period reading:X0.1 (43) 0x2B Relay 3 clean time reading:X1 (44) 0x2C Relay 3 delay time reading:X1 (45) 0x2D Relay 3 function reading:X1 0:clean,1:period alarm (46) 0x2E Record saving time reading:X1 (47) 0x2F EC Offset reading:X0.01/0.1/1 (48) 0x30 Resistivity Offset reading:X0.01 (49) 0x31 Salinity Offset reading:X0.01	(36)	0x24	Relay 2 SAL open S.P.	reading:X0.01
(39) 0x27 Relay 2 TDS1 open S.P. reading:X1 (40) 0x28 Relay 2 TDS2 open S.P. reading:X1 (41) 0x29 Relay 2 delay time reading:X1 (42) 0x2A Relay 3 clean period reading:X0.1 (43) 0x2B Relay 3 clean time reading:X1 (44) 0x2C Relay 3 delay time reading:X1 (45) 0x2D Relay 3 function reading:X1 0:clean,1:period alarm (46) 0x2E Record saving time reading:X1 (47) 0x2F EC Offset reading:X0.01/0.1/1 (48) 0x30 Resistivity Offset reading:X0.01 (49) 0x31 Salinity Offset reading:X0.01	(37)	0x25	Relay 2 TDS1 close S.P.	reading:X1
(40)0x28Relay 2 TDS2 open S.P.reading:X1(41)0x29Relay 2 delay timereading:X1(42)0x2ARelay 3 clean periodreading:X0.1(43)0x2BRelay 3 clean timereading:X1(44)0x2CRelay 3 delay timereading:X1(45)0x2DRelay 3 functionreading:X10:clean,1:period alarm(46)0x2ERecord saving timereading:X1(47)0x2FEC Offsetreading:X0.01/0.1/1(48)0x30Resistivity Offsetreading:X0.01(49)0x31Salinity Offsetreading:X0.01	(38)	0x26	Relay 2 TDS2 close S.P.	reading:X1
(41)0x29Relay 2 delay timereading:X1(42)0x2ARelay 3 clean periodreading:X0.1(43)0x2BRelay 3 clean timereading:X1(44)0x2CRelay 3 delay timereading:X1(45)0x2DRelay 3 functionreading:X10:clean,1:period alarm(46)0x2ERecord saving timereading:X1(47)0x2FEC Offsetreading:X0.01/0.1/1(48)0x30Resistivity Offsetreading:X0.01(49)0x31Salinity Offsetreading:X0.01	(39)	0x27	Relay 2 TDS1 open S.P.	reading:X1
(42)0x2ARelay 3 clean periodreading:X0.1(43)0x2BRelay 3 clean timereading:X1(44)0x2CRelay 3 delay timereading:X1(45)0x2DRelay 3 functionreading:X10:clean,1:period alarm(46)0x2ERecord saving timereading:X1(47)0x2FEC Offsetreading:X0.01/0.1/1(48)0x30Resistivity Offsetreading:X0.01(49)0x31Salinity Offsetreading:X0.01	(40)	0x28	Relay 2 TDS2 open S.P.	reading:X1
(43)0x2BRelay 3 clean timereading:X1(44)0x2CRelay 3 delay timereading:X1(45)0x2DRelay 3 functionreading:X10:clean,1:period alarm(46)0x2ERecord saving timereading:X1(47)0x2FEC Offsetreading:X0.01/0.1/1(48)0x30Resistivity Offsetreading:X0.01(49)0x31Salinity Offsetreading:X0.01	(41)	0x29	Relay 2 delay time	reading:X1
(44)0x2CRelay 3 delay timereading:X1(45)0x2DRelay 3 functionreading:X10:clean,1:period alarm ,2:Error alarm(46)0x2ERecord saving timereading:X1(47)0x2FEC Offsetreading:X0.01/0.1/1(48)0x30Resistivity Offsetreading:X0.01(49)0x31Salinity Offsetreading:X0.01	(42)	0x2A	Relay 3 clean period	reading:X0.1
(45) 0x2D Relay 3 function reading:X1 0:clean,1:period alarm ,2:Error alarm (46) 0x2E Record saving time reading:X1 (47) 0x2F EC Offset reading:X0.01/0.1/1 (48) 0x30 Resistivity Offset reading:X0.01 (49) 0x31 Salinity Offset reading:X0.01	(43)	0x2B	Relay 3 clean time	reading:X1
,2:Error alarm (46) 0x2E Record saving time reading:X1 (47) 0x2F EC Offset reading:X0.01/0.1/1 (48) 0x30 Resistivity Offset reading:X0.01 (49) 0x31 Salinity Offset reading:X0.01	(44)	0x2C	Relay 3 delay time	reading:X1
(46)0x2ERecord saving timereading:X1(47)0x2FEC Offsetreading:X0.01/0.1/1(48)0x30Resistivity Offsetreading:X0.01(49)0x31Salinity Offsetreading:X0.01	(45)	0x2D	Relay 3 function	reading:X1 0:clean,1:period alarm
(47)0x2FEC Offsetreading:X0.01/0.1/1(48)0x30Resistivity Offsetreading:X0.01(49)0x31Salinity Offsetreading:X0.01				,2:Error alarm
(48)0x30Resistivity Offsetreading:X0.01(49)0x31Salinity Offsetreading:X0.01	(46)	0x2E	Record saving time	reading:X1
(49) 0x31 Salinity Offset reading:X0.01	(47)	0x2F	EC Offset	_
· · · · · · · · · · · · · · · · · · ·	(48)	0x30	Resistivity Offset	reading:X0.01
(50) 0x32 TDS Offset reading:X1			•	_
	(50)	0x32	TDS Offset	reading:X1

(51)	0x33	Temp. offset	reading:X0.1	
(52)	0x34	Language	reading:X1	0=English ,1=traditional
				Chinese,2=simple Chinese
(53)	0x35	Filter	reading:X1	
(54)	0x36	Temperature coefficient	reading:X0.01	0.01%-40.00%
(55)	0x37	Reference temperature	reading:X0.1	15.0-35.0 ℃
(56)	0x38	Mode	reading:	0=EC,1=RES,2=SAL,3=TDS
(57)	0x39	Temp. probe	reading:	0=Pt1000,1=NTC 30K